

1. You'll need a screw driver to remove the back panel and a paper clip to push the reset



button:

- 2. Disconnect power and turn the battery key to the off position. Be ready to proceed through next steps quickly, Once you apply power you have 3 seconds to press the reset button.
- 3. Connect power and wait for the LED indicator on the front of the Mezzo to flash
- 4. Immediately press the reset button in for 3 seconds then release it.
- 5. The Mezzo will sound a chime and will say "Mezzo is defaulting to factory settings."
- 6. Turn the Battery key to the On Position
- 7. Mezzo will now default all of its settings, it takes approximately 4-5 minutes, and will conclude with the announcement "Your Mezzo is Ready"